


FULL BODY HARNESS WITH ENERGY ABSORBER



Professional Certification:

- EN361:2002; Full Body Harness
- EN362:2004; Connectors
- EN354:2010; Lanyards for Fall Arrest
- EN355:2002: Energy Absorbers

SAMPLE Calculation of Total fall distance/ Clearance height

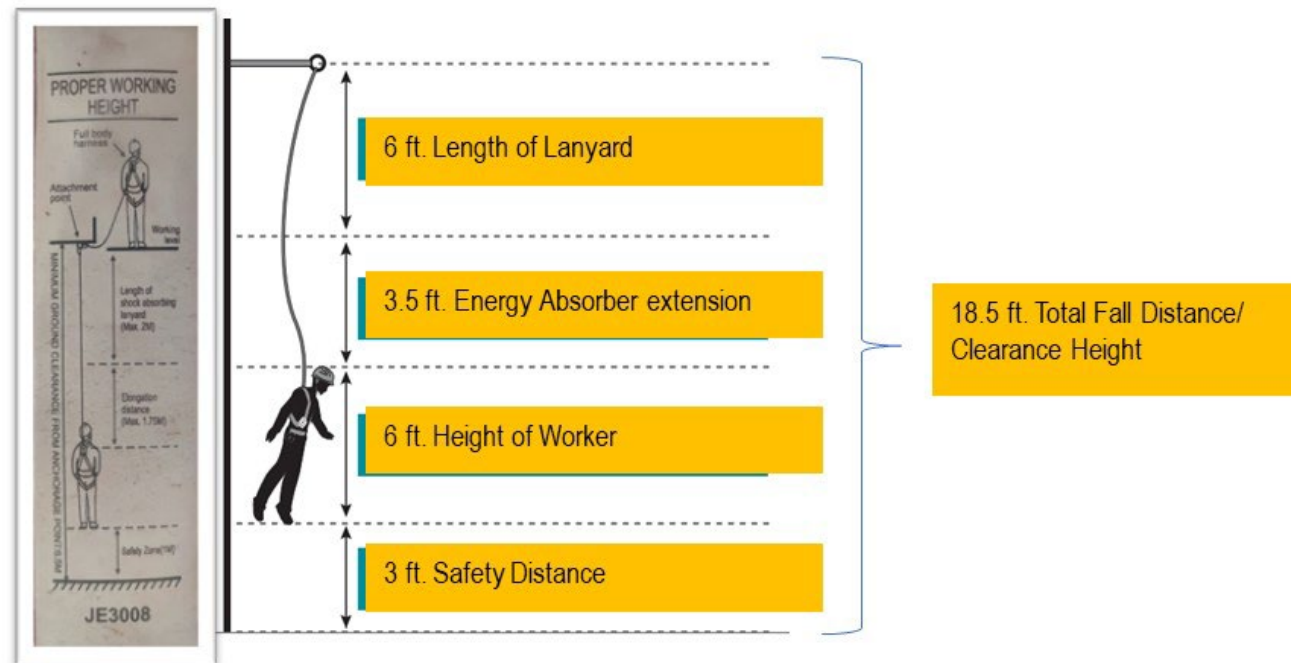

For a harness, lanyard with energy absorber assembly:

Clearance Height = Length of Lanyard + Length of Energy Absorber Extension + Height of Worker + Safety Distance (usually taken as 3 ft / 1 m)