



FALL ARRESTER - SRL - SELF RETRACTABLE LIFELINE WITH ENERGY ABSORBER

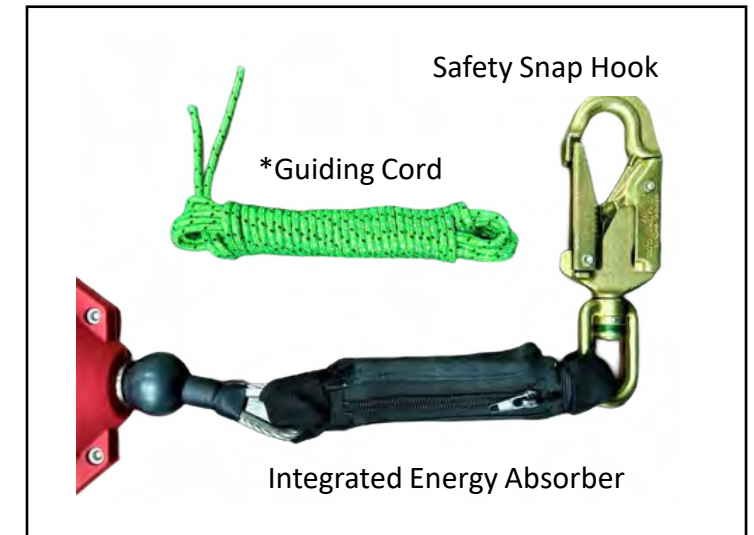

- Certified for vertical use; EN360:2002 Certification
- Retractable Fall ; Cable extends & retracts to the movement of user automatically
- 4.8mm wire rope cable line
- Energy Absorber integrated into lifeline
- Max user weight: 100kg
- Cable Length available in 6m, 10m

*Supplied with guiding cord to guide cable back into retractor

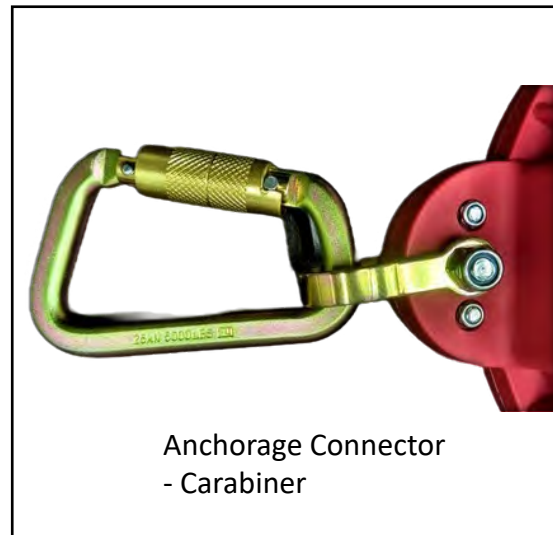

SYSTEM REQUIREMENTS:

The fall arrester products is designed for use with CE standard Products approved components and subsystems only. Substitutions or replacements made with non-approved components or subsystems may jeopardize compatibility of equipment and may affect the safety and reliability of the complete system. When using a fall arrester with a support structure (i.e. tripod, davit arm) ensure the support structure is compatible with the connection operation, stability, and strength of the fall arrester.

OPERATION AND USE:

BEFORE EACH USE carefully inspect it according to the following list steps:

- Step1:**
Inspect for loose screws and bent or damaged parts.
- Step2:**
Inspect the housing for distortion ,cracks or other damage .
Ensure the karabiner moves freely and is free from distortion, cracks, burrs and worn parts.
- Step3:**
The main cable must fully extend and fully retract. The cable must be taut(under tension).
- Step4:**
Ensure the device locks up when the main cable is jerked sharply , the lock up must be positive with no slipping.

- Step5:**
Look for signs of corrosion on the entire unit.
- Step6:**
Inspect the cable. Look for any lose nuts, kinks, burns, broken wires or strands, chemical damage, and severe abrasion. The cable must not be damaged.
- Step7:**
Record inspection results in the equipment record sheet.

MAINTENANCE ,SERVICING .STORAGE :

Periodically clean the plastic shell Of fall arrester with water .The fall arrester so excess water can drain out ,clean labels with cloth wipe .
Clean cable with a wet water cloth .Rinse and thoroughly air dry .Do not force the drying with heat .An excessive build up of dirt ,paint ,etc., may prevent the cable from fully retracting , causing a potential free fall hazard . Replace the cable if there is excessive build up .
Clean and store body support and associated system components according to the manufacturer's instructions .
Store the fall arrester in a cool , dry, clean environment , out of direct sunlight .Avoid areas where chemical vapours may exist . Inspect the fall arrester after extended storage.

EXPLANATIONS FOR THE PICTOGRAMS ON THE LABEL



If a thread breaks, the cable /lay becomes roughened, worn or damaged in any way the fall arrester must be returned to the home dealer so that the damaged component can be replaced



Temperature of use : from -30 °to+ 50°



The braking function operates by giving a quick tug on the cable hook .The cable should brake immediately.



Store the fall arrester,hanging up ,in a ventilated place away from humidity and from ultraviolet lights .



Safety harnesses according to EN361 are permitted for use with the fall arrestor (other harnesses Etc. Are not permissible)



It is strictly forbidden to modify or repair a PPE yourself . Only the manufacturer or a repair centre is qualified to carry out these repairs.



Maximum human load: 100 kg.



Limit of pendular movement inferior to 30°

PLANING YOUR SYSTEM

Plan your fall protection system and how it will be used before starting your work. Consider all factors that will affect your safety before, during, and after a fall .The following list gives some important points to consider when planning your system .The anchorage location must be carefully selected to reduce free fall and swing fall hazards, and to avoid striking and object during a fall. Do not work above your anchorage level and avoid an increased freefall distance.

FREE FALL:

Personal fall arrest systems must be rigged so the potential free fall is never greater than 1.8meters .Avoid working above the anchorage level to avoid working where your line may cross or tangle with that of another workers or objects .Do not allow the cable to pass under arms or between legs .Never clamp or knot the cable or prevent the cable from retracting or being taut. Avoid slack line. Do not connecting a lanyard or other parts without consulting with Safety line products.

SWING FALLS:

Swing falls occur when the anchorage point is not directly above the point where a fall occurs. The force of striking an object in a swing fall may cause serious injury. In a swing fall may cause serious injury. In a swing fall, the total vertical fall distance will be greater than if the user had fallen directly below the anchorage point, thus increasing the total free fall distance and the area required to safely arrest the user . The fall arrester will activation relative to the user. The recommended work zone represents the typical acceptable work area for most applications .Review your specific application to deter what the appropriate work zone should be.

WARNING Minimize swing falls by working as directly below the anchorage point as possible. Never permit a swing fall is injury could occur.

FALL CLEARANCE:

Ensure adequate clearance exists in your fall path to prevent striking an object. A minimum of 2.90 metres from working level to lower level or nearest obstructions recommended.

IMPORTANT Do not use a body belt for free fall applications. Withdraw from use immediately if there is any doubt about its safe condition or is it has already arrested a fall , the equipment shall not be used again.

MAKING CONNEXIONS:

When using a hook to make a connection, ensure roll-out cannot occur. Roll-out occurs when interference between a hook and the mating connector causes the hook gate to lock. Self locking karabiners must be used to reduce the possibility of roll-out when making connections. Do not use hooks or connectors that will completely close over the attachment object.

OPERATION:

Inspect the fall arrester as described in the steps. Connect the fall arrester to a suitable anchorage or anchorage connect the self locking snap hook or self locking karabiner on to the full body harness .Ensure the hook is securely closed and locked.

USE:

When attached to fall arrester, the user is free to move about within recommended working areas at normal speeds. Should a fall occur,the fall arrester will lock and arrest the fall, Upon rescue,remove the fall arrester from use.